Quick Setup Guide

NS-WBRDVD2/NS-WBRDVD2-CA for Wireless Blu-ray Disc Player and NS-BRDVD4/NS-BRDVD4-CA for Wired Blu-Ray Disc Player

Congratulations on your purchase of a high-quality Insignia product. Your NS-WBRDVD2, NS-WBRDVD2-CA, NS-BRDVD4, and NS-BRDVD4-CA represents the state of the art in Blu-ray disc player design and is designed for reliable and trouble-free performance.

Package contents

- Blu-ray disc player
- Remote control
- *Quick Setup Guide*
- AAA batteries (2)
- *User Guide*

Installing remote control batteries

1 Remove the battery compartment cover.

2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.

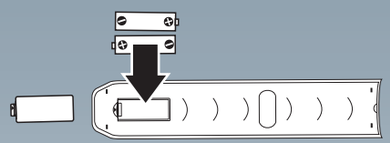

3 Replace the battery compartment cover.

Connecting a TV

Using HDMI (best)

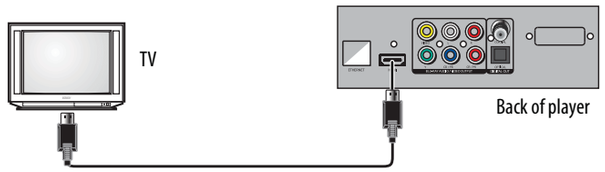

Using component (better)

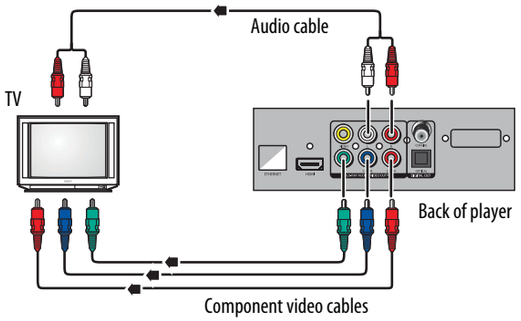

Using composite (good)

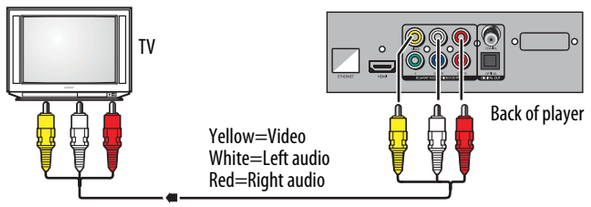

To connect to a home theater, see your *User Guide*.

Using Quick Setup

1 Press **ENTER**. The *Settings* menu opens.

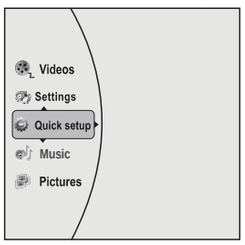

2 Press ▲ or ▼ to select **Quick setup**, then press **ENTER**. The *Quick Setup* menu opens.

Follow the guide to set the most important settings for your player.

Connecting to your home network

This player can be connected to your wired network using the Ethernet port on the back of your player or using a wireless network. Using a wired network provides the best performance, because the attached devices connect directly to the network and are not subject to radio frequency interference.

Connecting to the Internet with a wireless network (NS-WBRDVD2 and NS-WBRDVD2-CA only):

1 Set up your access point or wireless router (if not already set up).

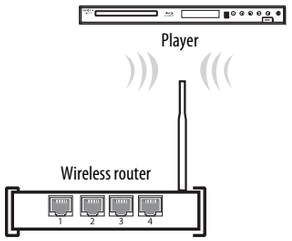

2 Turn on your player and your TV.

3 Press **ENTER**. The *Settings* menu opens.

4 Select **Network**, then press **ENTER**.

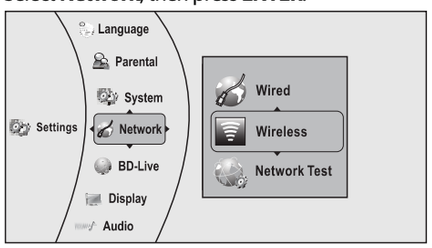

5 Press ▲ or ▼ to select **Wireless**, then press **ENTER**. The *Wireless Settings* screen opens.

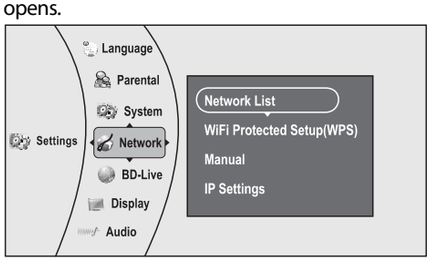

6 Press ▲ or ▼ to select **Network List**, then press **ENTER**. The *Network List* screen opens, showing a list of available wireless networks.

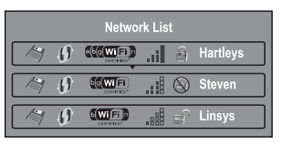

7 Select the wireless network you want your player to connect to. A *Network Setup* screen opens.

8 If your network does not use encryption, press ▲ or ▼ to select **Connect**, then press **ENTER**. If the wireless network is working, you should see a checkmark and a connected message on the TV. If the message does not appear, repeat the steps above.

OR

If your network uses encryption:

a Press ▲ or ▼ to select the **Password** field, then press **ENTER**. An on-screen keyboard opens.

b Press ▲, ▼, ◀, or ▶ to select the first letter in the password, then press **ENTER**. Repeat this step to enter the rest of the password. If you make a mistake, use clear key to delete the character.

c After you enter the password, select the red "DONE" in the upper left-hand corner of the keyboard, then press **ENTER** to close the keyboard.

d Press ▲ or ▼ to select **Connect**, then press **ENTER**. If the wireless network is working, you should see a checkmark and a connected message on the TV. If the message does not appear, repeat the steps above.

For information on connecting to a wireless network using Wi-Fi Protected Setup (WPS), see your *User Guide*.

Connecting to the Internet with a wired network:

1 Connect a network cable to the ETHERNET jack on the back of your player and into a wired router using an Ethernet cable (Cat 5 or better, with RJ45 connectors).

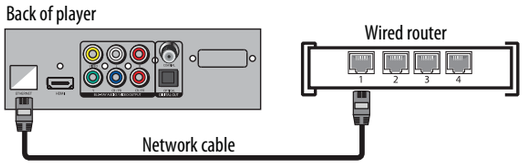

2 Determine if the network connection is active.

a Press **ENTER**. The *Settings* menu opens.

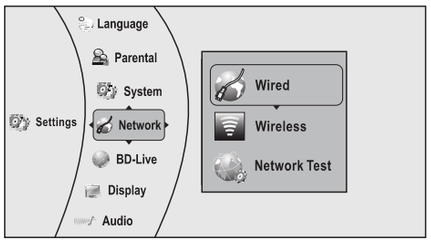

b Select **Network**, then press **ENTER**.

c Press ▲ or ▼ to select **Wired**, then press **ENTER**. The *IP Settings* screen opens. If the network connection is active, **Link Up** appears next to **Link Status**. If the network connection is not active, **Link Down** appears next to **Link Status**.

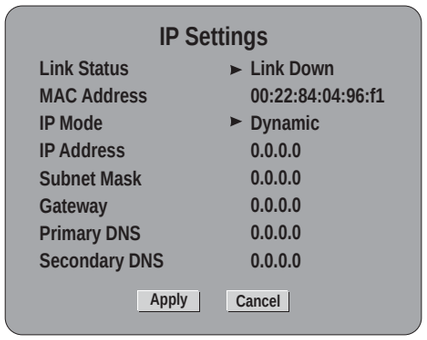

d Press **CANCEL** to return to previous menu.

Advanced users only: To make changes to your network connection, see your *User Guide*.

Testing your network connection

1 Press **ENTER**. The *Settings* menu opens.

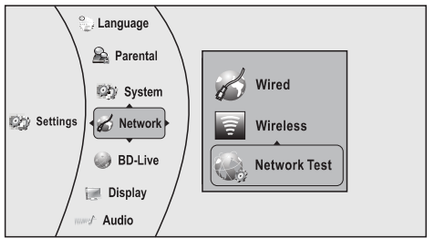

2 Select **Network**, then press **ENTER**.

3 Select **Network Test**, then press **ENTER**.
The Network Test will begin and run three tests:

1 **Local Network Test**. If this test fails, you need to check your connection to your home network.

- **If you have a wired connection:**
  - Make sure your network cable is securely attached to your router and your player.
  - Make sure your router is connected to your cable or DSL modem correctly.
- **If you have a wireless connection:**
  - Make sure your router is connected to your cable or DSL modem correctly.
  - Make sure your player is within the range of your router.
  - Make sure the desired WIFI network is selected.
  - If you have a security password, be sure you have entered the password correctly.
- If further help is need for setting up security and obtaining your security password, contact your router manufacturer and/or cable or DSL modem manufacturer.

2 **DNS Sever Test**. If this test fails, there may be an issue with your Internet service provider.

- Make sure your router is connected to your cable or DSL modem correctly.
- Contact your Internet service provider for more help.

3 **Internet Connection Test**. If this test fails, there may be an issue with your Internet service provider.

- Make sure your router is connected to your cable or DSL modem correctly.
- Contact your Internet service provider for more help.

Using connected applications (U.S. market)

Note: Instructions and support numbers for the connected applications apply to the US market only.

You can watch movies over the Internet (for example, from Netflix or CinemaNow), or to listen to Pandora Internet radio. Before being able to use these Internet services, you must first:

1 Have connected the player to the Internet, and passed the Network Test, above.

2 Have a valid account to these services.

Watching movies with Netflix

1 Press ▲ or ▼ to select **Netflix**, then press **ENTER**. See your *User Guide* for the activation code.

2 On your PC, go to http://www.netflix.com/Activate. Use your Netflix account to log in.

3 After setting up your account, enter the activation code displayed on the player, then click the **Activate** button.

4 On your player, select **Netflix** from the *Connected* menu to watch the movies in your Instant Queue.

Watching movies with CinemaNow

1 On your PC, log in to CinemaNow with your account and password.

2 Browse to **My Account** > **Activate/Deactivate** > **Activate a new device**, following the guide, then get an activation code.

3 On your player, press ▲ or ▼ to select **CinemaNow**, then press **ENTER**, when CinemaNow boots up, enter the activation code, then watch movies.

Listening to music with Pandora

To use an existing Pandora account:

1 Press ▲ or ▼ to select **Pandora**, then press **ENTER**.

2 Select **I have a Pandora account** from the options, then sign in with your account information.

To create a new Pandora account on your player:

1 Press ▲ or ▼ to select **Pandora**.

2 Select **I am new to Pandora** from the options. You will receive an activation code. Use this activation code to generate a new account and link it to your player using a PC.

3 On your PC, go to www.pandora.com/insignia and create a new account.

Contact the partner company (not Insignia) if you experience an issue using one of these applications.

Note: Support numbers for the connected applications apply to the US market only.

Netflix:
www.netflix.com/help
1-866-579-7113

CinemaNow:
www.cinemanow.com/support

Pandora:
http://blog.pandora.com/faq/

Using connected applications (Canada market)

To stay up-to-date on future service options, visit www.insigniaproducts.com.

One-year limited warranty

Visit www.insigniaproducts.com for details.

Contact Insignia:

For customer service, call 1-877-467-4289 (US and Canada markets)
www.insigniaproducts.com

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2010 BBY Solutions, Inc. All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.